



# **FLUSH MOUNTING KIT INSTRUCTION MANUAL**

Cover Screw



Cover Screw



Bracket  
Screw



Bracket  
Screw



Bracket  
Screw




Cover Screw



Cover Screw




Square Hole


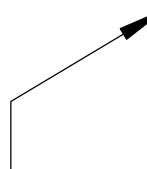


**HOLE TEMPLATE**

**Picture 1**

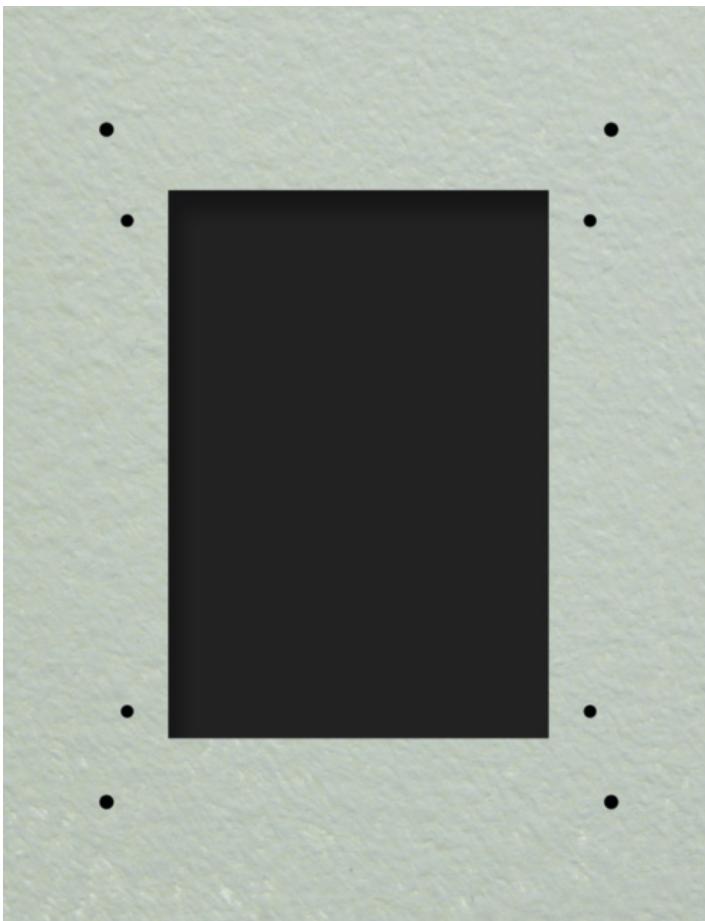

**Picture 2**

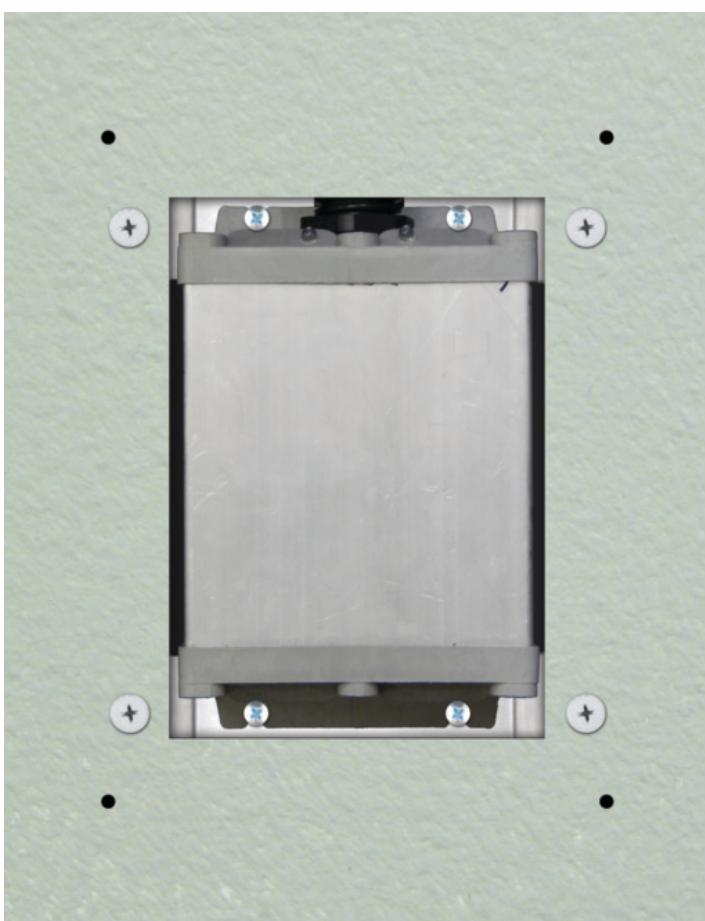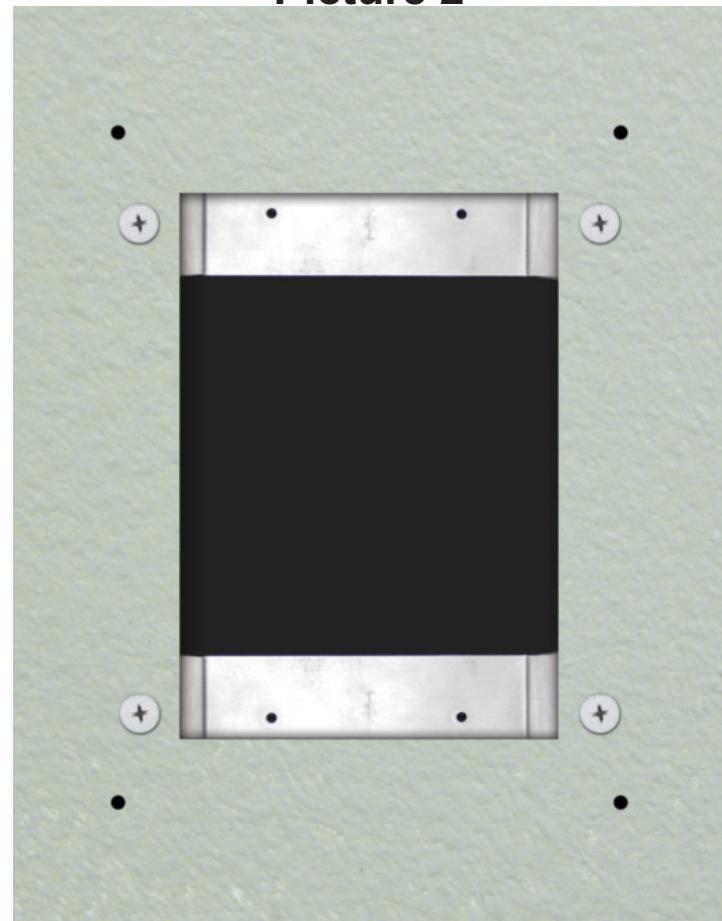


**Picture 3**




**Picture 4**

# Flush Mount Kit for PT-HW Surge Protective Devices

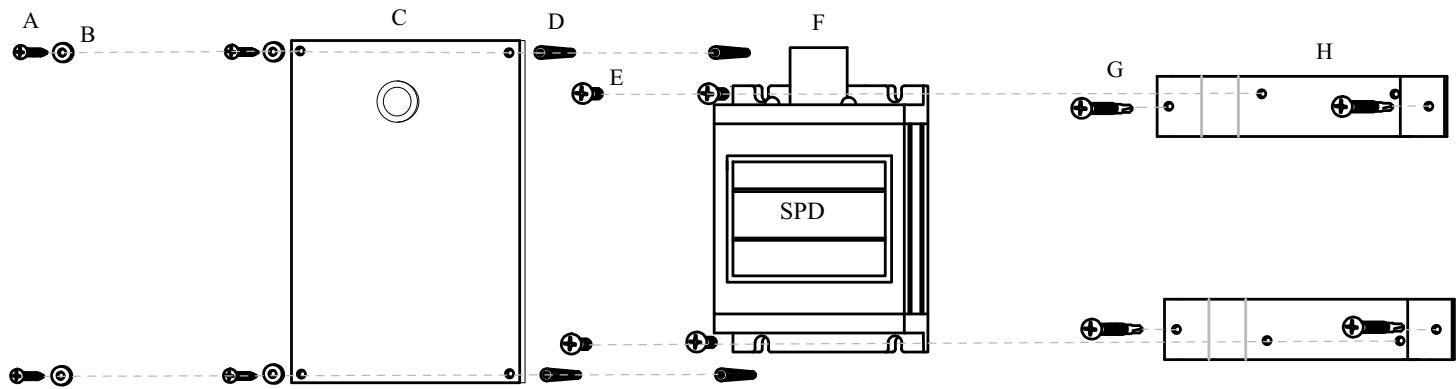

A #6 screw (pan or flat head)  
B #6 flat washer (optional)

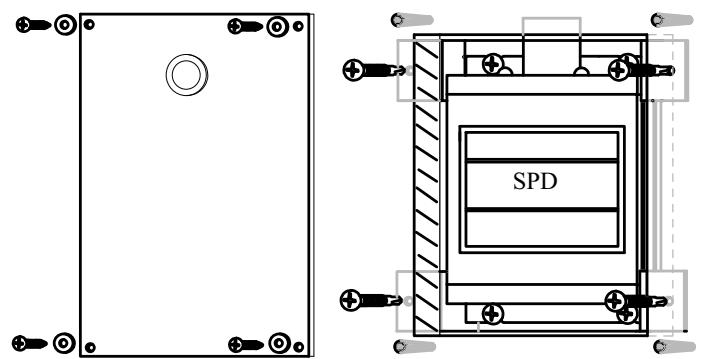

## Instructions

1. Place template on drywall. Mark all the holes and main cutout for the unit.
2. Drill out the holes. Cut out the rectangular hole for the unit. It should look like Picture 1.
3. Mount the brackets for the unit from behind the drywall as shown in Picture 2.
4. Wire the unit accordingly to the type of service before you mount it in the hole.
5. Mount the unit as shown in Picture 3.
6. For a fully flushed finish, mount the shield as shown in Picture 4. Make sure the lens of the shield lines up correctly with the LED's on the unit, so you can monitor the correct functionality of the unit.